# Compact Rebel Series Sanders 5" & 7" Diameter, Vacuum

Safety, Operation and Maintenance – Save This Document and Educate All Personnel

Model	Spindle Thread	Wheel	RPM	Exhaust	Power
58912V	- 5/8"-11	5" Dia. (125 mm)	12,000	Rear	2.2 hp
58914V		7" Dia. (180 mm)	8,500	i iodi	2 hp

SANDER





Find The Most Current Offering of Support Documents and Accessories at www.Dynabrade.com

## **A WARNING**

Read and understand this tool manual before operating your air tool. Follow all safety rules for the protection of operating personnel as well as adjacent areas. Always operate, inspect and maintain this tool in accordance with the American National Standards Institute (ANSI). Safety Requirements for the Use, Care and Protection of Abrasive Wheels – ANSI B7.1, Compressed Air and Gas Institute (CAGI) Safety Code for Portable Air Tools – B186.1, Code of Federal Regulation – CFR 29 Part 1910, International Organization for Standardization (ISO) Hand Held Non-Electric Power Tools – ISO 11148, Safety Requirements and applicable State and Local Regulations.



Read and understand tool manual before work starts to reduce risk of injury to operator, visitors, and tool.



Ear protection to be worn when exposure to sound, exceeds the limits of applicable Federal, State or local statues, ordinances and/or regulations.



Respiratory protection to be used when exposed to contaminants that exceed the applicable threshold limit values required by law.



Eye protection must be worn at all times, eye protection to conform to ANSI Z87.1.



Practice safety requirements. Work alert, have proper attire, and do not operate tools under the influence of alcohol or drugs.



Air line hazard, pressurized supply lines and flexible hoses can cause serious injury. Do not use damaged, frayed or deteriorated air hoses and fittings.

Some dust created by sanding, grinding, drilling, and other construction activities contain chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- · Lead from lead-based paints
- · Crystalline silica from bricks and cement and other masonry products
- · Arsenic and chromium from chemically treated lumber

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

### **SAFETY and OPERATING INSTRUCTIONS**



Carefully Read and Understand the General and Grinder sections found in Tool Safety and Operating Guidelines (PN00001676) Before Handling or Using Tool.

Carefully Read all instructions before operating or servicing any Dynabrade® Abrasive Power Tool. Products offered by Dynabrade are not to be modified, converted or otherwise altered from the original design.

**Tool Intent:** Compact Rebel Series Vacuum Sanders are intended to be used by professional operators and are intended for non-sparking material removal using 5" or 7" back-up pad and 5" or 7" diameter abrasive disc with 7/8" center hole. Follow Compact Rebel Series Sander back up pad mounting instructions included with the tool.

### DO NOT USE Tool for Anything Other Than Its Intended Applications.

Training: Proper care, maintenance, and storage of your air tool will maximize tools performance and reduce chance for accident.

Employer's Responsibility: Provide operators with safety instructions and training for safe use of tools and accessories.

Report to Your Supervisor any Condition of the Tool, Accessories or Operation you Consider Unsafe.

### MAINTENANCE INSTRUCTIONS

Important: To keep tool safe, a Preventative Maintenance Program is recommended. The program should include inspection of the tool and all related accessories and consumables, including air lines, pressure regulators, filters, oilers, etc. (refer to CAGI B186.1 for additional maintenance information). If accessory or tool breakage occurs, investigate failure to determine the cause and correct before issuing tool for work. Use the following schedule as a starting point in developing a Preventative Maintenance Program. If tool does not operate properly (RPM, vibration, start/stop) after these scheduled checks or at any time, the tool must be repaired and corrected before returning tool to use.

### INSTALLATION

- To ensure long life and dependable service, use a Closed Loop Air System and Filter-Regulator-Lubricator (FRL) as diagramed below.
- Each tool should have its own dedicated hose connected to an air supply FRL. Quick disconnects should be installed at the FRL in an effort to reduce contamination into the tool. Securely affix all fittings and hose assemblies.
- It is strongly recommended that all Dynabrade rotary vane air tools be used
  with a Filter-Regulator-Lubricator to minimize the possibility of misuse due to
  unclean air, wet air or insufficient lubrication. Dynabrade recommends the
  following: 10690 Air Line Filter-Regulator-Lubricator Provides accurate air
  pressure regulation, two-stage filtration of water contaminants and micro-mist
  lubrication of pneumatic components.
- Dynabrade recommends 1 drop of air lube per minute max. 95842 Dynabrade Air Lube is recommended.

### **MAINTENANCE SCHEDULE**

 
Maintenance schedules depend on the type and style of tool. Refer to page 3 to reference symbols associated with specific maintenance items/areas. Match maintenance schedules accordingly. See page 4 for any additional maintenance information.

### Daily (every 8 hours):

 Inspect tool and accessories for damage or broken parts. Replace items as necessary to ensure proper operation and safety.



Lubricate motor as recommended. Use **95842** Dynabrade Air Lube (10W/NR). Apply 1 drop/minute of air lube. Lubricate wick system through the angle gear oil fitting with 4-5 plunges for every 8 hours of use, to achieve maximum gear life.



- Check air line pressure with a gage. (MAX. 90 PSIG or 6.2 Bar operating pressure at the air inlet of the tool.)
- Check tool for proper operation: If operating improperly or demonstrates unusual vibration, the tool must be serviced and problem corrected before further use.

### Every 20 Hours/Once a Week (which ever comes first):

 Measure RPM (speed) by setting air pressure to 90 PSIG (6.2 Bar) at tool inlet, without accessory mounted, while the tool is running. Using a tachometer, check spindle speed of the tool. Unless otherwise stated the no-load speed may not exceed the rated speed. If tool speed exceeds maximum rated RPM, service as required and correct before use

- If tool is running too fast: look for worn, damaged or missing governor. Service as required.
- If tool is running too slow: look for malfunctioning governor, clogged inlet screen, or air stream. Service as required.
- Governors are not serviceable, replace complete 59699 (4.5") 13K or 59700 (5") 12K Governor Assemblies; do not try to repair. Do not pull on springs in effort to adjust governor.

**Note:** Special care must be taken when servicing governors. Refer to specific tool manual for governor instructions and/or speed control devices. Governor assemblies made from molded plastic components are non-serviceable and must be replaced.

### REPAIR

- Use only genuine Dynabrade replacement parts to ensure quality. To order replacement parts, specify Model#, Serial# and RPM of your air tool.
- Mineral spirits are recommended when cleaning the tool and parts. Do not clean tool or parts with any solvents or oils containing acids, esters, ketones, chlorinated hydrocarbons or nitro carbons.
- A Motor Tune-Up Kit is available which includes high wear and medium wear motor parts.
- Air tool markings must be kept legible at all times, if not, reorder grip and replace. User is responsible for maintaining specification information.



After maintenance is performed on tool, add a few drops of **95842** Dynabrade Air Lube to the tool inlet and start the tool a few times to lubricate air motor. Verify RPM (per 20 hr maintenance schedule), vibration and operation.

### **HANDLING & STORAGE**


- · Use of tool rests, hangers and/or balancers is recommended.
- · Protect tool inlet from debris (see Notice below).
- Do Not carry tool by air hose or near the tool throttle lever.
- · Store accessories in protective racks or compartments to prevent damage.
- Follow the handling instructions outlined in the operating instructions when carrying the tool and when changing accessories.
- Protect accessories from exposure to water, solvents, high humidity, freezing temperature and extreme temperature changes.

### **END OF USE/DISPOSAL**

When tool has reached its end of useful service, disassemble tool into its primary components (i.e. steel, aluminum and plastic) and recycle or discard per local, state and/or federal regulations as to not harm the environment.


### **NOTICE**

All Dynabrade air motors use the highest quality parts available and are manufactured to exacting tolerances. Air motor failures are often traced to lack of lubrication or unclean air supply. Compressed air can force dirt and other contaminants into motor bearings causing early failure. Contaminants can score cylinder wall and vanes resulting in reduced efficiency and power. Our warranty obligation is contingent upon proper use of our tools. Air motors which have been subjected to misuse, contaminated air or lack of lubrication will void warranty.

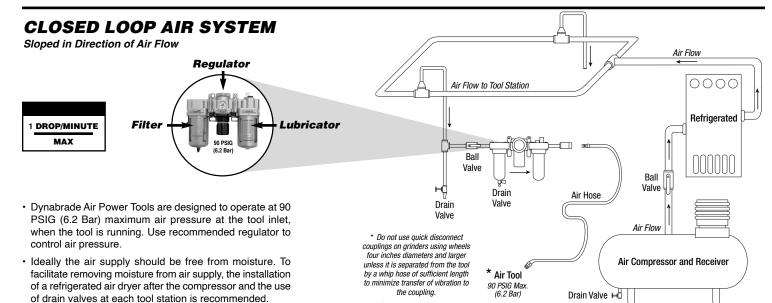

# **Models:** 58912V - 12,000 RPM, 5" Dia. 58914V - 8,500 RPM, 7" Dia.

### Compact Rebel Series Vacuum Sander Complete Assembly

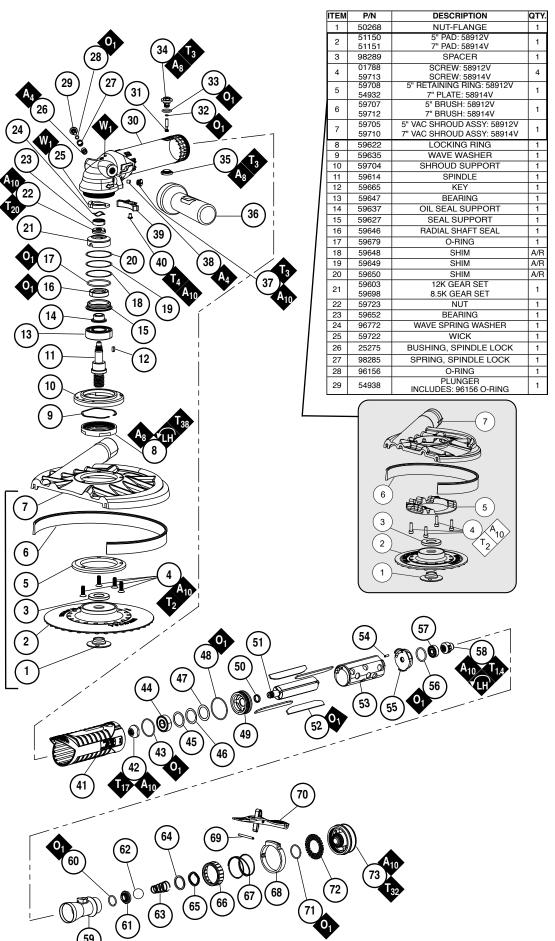

QT	DESCRIPTION	P/N	TEM	
1	HOUSING ASSEMBLY	59620	30	
1	VALVE STEM	59629	31	
1	O-RING	59671	32	
1	O-RING	59677	33	
1	BUSHING, THROTTLE	59634	34	
1	VALVE STEM PLUG	59690	35	
1	HANDLE ASSEMBLY	53134	36	
1	MAGNET HOLDER	59724	37	
1	MAGNET	59725	38	
1	LATCH COVER	59658	39	
1	SCREW	97174	40	
+ -	GRIP: 58912V	59736		
1	GRIP: 58914V	59740	41	
1	PINION	59604	42	
1	O-RING	59678	43	
1	BEARING	59651	44	
A/F	SHIM	01293	45	
A/F	SHIM	01294	46	
1	SHIM	59660	47	
1	O-RING	59675	48	
1	FRONT END PLATE	59624	49	
1	ROTOR SPACER	59631	50	
1	BOTOR	59611	51	
1	VANE SET (4 PKG)	59714	52	
1	CYLINDER	59628	53	
1	PIN	59626	54	
1	REAR END PLATE	59626	55	
1	O-RING	96773	56	
1	BEARING	59653	57	
+ '	GOVERNOR 12K	59700	31	
1	GOVERNOR 12K GOVERNOR 8.5K	59700	58	
1	THROTTLE HOUSING	59618	59	
1	O-RING	59680	60	
1	BALL SEAL	59664	61	
1	THROTTLE BALL	59668	62	
1	SPRING	59659	63	
1	SPACER	59689	64	
1	WASHER	59643	65	
1	BAFFLE	59663	66	
1	MUFFLER SPRING	59633	67	
1	LEVER SUPPORT	59615	68	
1	PIN	59672	69	
1	LEVER ASSY	59717	70	
1	O-RING	59674	71	
1	EXHAUST SCREEN	59654	72	
1	ADAPTOR INLET ASSY	59721	73	
1	WRENCH	94949	-	



### LIMITED LIFETIME WARRANTY

To validate Dynabrade Limited Lifetime Warranty, you must register each tool at: www.dynabrade.com. Registration of each tool at website is required. Dynabrade will not honor Limited Lifetime Warranty on unregistered tools. Please view the entire Limited Lifetime Warranty Policy at: www.dynabrade.com.



### **MACHINE SPECIFICATIONS**

Model	Diameter	RPM	Power	Max. Air Flow	Air Pressure	Spindle	Weight	Height	Length	VAC
58912V	5" (125 mm)	12,000	2.2 hp (1.6 kw)	90 SCFM (2548 SLPM)	90 PSIG (6.2 Bars)	5/8"-11	4.54 lbs. (2.1 kg)	4.1" (104 mm)	9.5" (242 mm)	Yes
58914V	7" (180 mm)	8,500	2 hp (1.5 kw)				5.2 lbs. (2.4 kg)	4.2" (107 mm)		

Additional Specifications: Air Inlet Thread 3/8" NPT • Hose I.D. 1/2" (13 mm) Visit dynabrade.com for your model's current vibration and sound data.

### **OPTIONAL ACCESSORIES**



### Dynabrade Gear Oil

 Easy to apply with Dynabrade P/N 95541 Grease/Oil Gun (sold separately).

Part No. 95848: 2.5 oz. (74 ml) Tube Part No. 95541: Lubricant Gun, Push-Type



#### Overhose

- 3 ft. long tube with clamp.
- · Reduces noise.

Part No. 59716



### Dynabrade Air Lube

- · For pneumatic equipment.
- Absorbs up to 10% of its weight in water.
- Prevents rust and formation of sludge.

**Part No. 95821**: 4 oz. (118 ml) **Part No. 95842**: 1 pt. (473 ml)



### Whip Hose

• 1/2" diameter air line with 3/8" NPT Male fitting on one end, 1/2" NPT Female fitting on the other end.

Part No. 59702: 5 feet



### Tune-Up Kit

· Contains high and medium wear parts.

Part No. 96817

\*Gears sold separately.

### REFERENCE CONTACT INFORMATION

American National Standards Institute (ANSI) www.ansi.org

Compressed Air & Gas Institute (CAGI) www.cagi.org

**European Committee for Standardization (PNEUROP)** www.pneurop.org

**International Organization of Standards (ISO)** www.iso.org

U.S. Government Publishing Office (GPO) www.gpo.gov



www.dynabrade.com

